

# CF125

## Triumph Tiger Explorer 2011-2015 Triumph Tiger Explorer XC 2011-2015

| Kit for Left Side |                           |         |     |
|-------------------|---------------------------|---------|-----|
| ID                | Description               | Cat.No  | Pcs |
| 1                 | Frame                     | CF125-L | 1   |
| 2                 | Bolt M12x160x1,25mm       | 949     | 1   |
| 3                 | Bolt M12x100x1,25mm       | 911     | 1   |
| 4                 | Dural. sleeve length=59mm | 1321    | 1   |
| 5                 | Dural. sleeve length=22mm | 1322    | 1   |
| 6                 |                           |         |     |

| Kit for Right Side |                        |         |     |
|--------------------|------------------------|---------|-----|
| ID                 | Description            | Cat.No  | Pcs |
| 1                  | Frame                  | CF125-P | 1   |
| 2                  | Bolt M12x70x1,25mm     | 937     | 1   |
| 3                  | Bolt M12x150x1,25mm    | 984     | 1   |
| 4                  | Dural. sleeve l=14,5mm | 1323    | 1   |
| 5                  | Dural. sleeve l=40mm   | 1324    | 1   |
| 6                  | Plastic cap M12        | X60     | 1   |

**We recommend using medium strenght thread glue during assembly.**


### **Instructions:**

- 1.) Remove the original M12 bolts on the left side of the motorcycle.
- 2.) Take the left crash frame and insert the bolts ID 2 (front mounting) + ID 3 (rear mounting)
- 3.) Slide the dural. sleeves ID 4 (front mounting) + ID 5 (rear mounting) onto the bolts from the rear and mount the whole assembly to the motorcycle frame. For safety reasons, you can use medium strength thread glue.
- 4.) Remove the original M12 bolts on the right side of the motorcycle.
- 5.) Take the right crash frame and insert the bolts ID 3 (front mounting) + ID 2 (rear mounting).
- 6.) Slide the dural. sleeves ID 5 (front mounting) + ID 4 (rear mounting) onto the bolts from the rear and mount the whole assembly to the motorcycle frame. For safety reasons, you can use medium strength thread glue
- 7.) Finally, tighten all the bolts and put on the plastic cap ID.6.



Bolt ID.2 + dural. sleeve  
ID.4

Bolt ID.3 + dural. sleeve  
ID.5

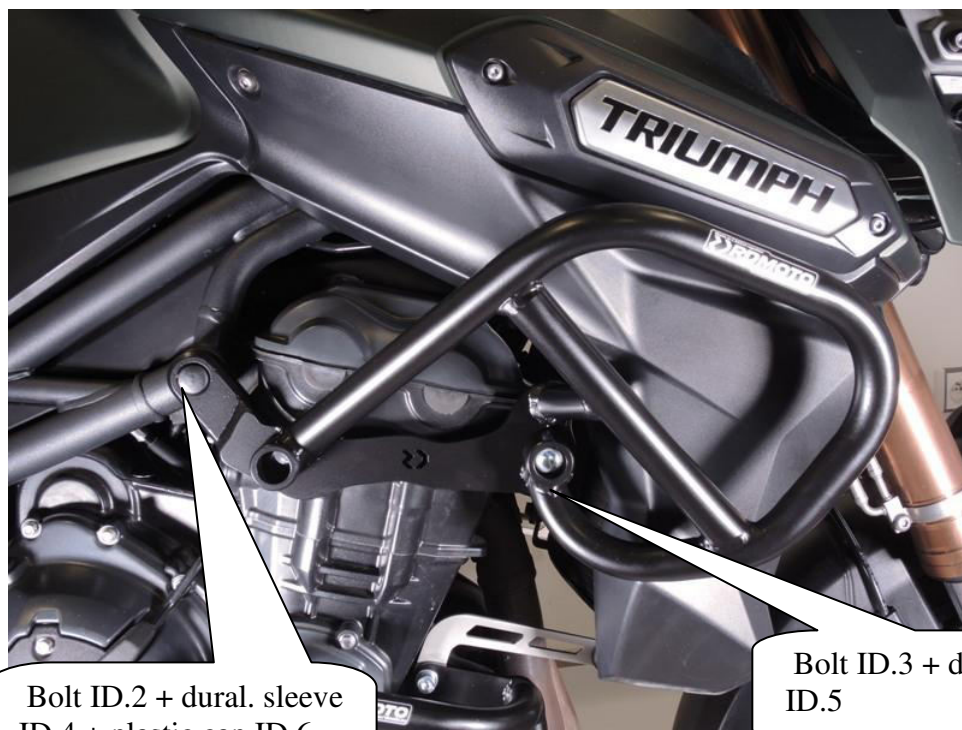

Bolt ID.2 + dural. sleeve  
ID.4 + plastic cap ID.6

Bolt ID.3 + dural. sleeve  
ID.5